



Believe in better



Customer Care Line  
(after sales service)

086 100 3339



Believe in better

The graphic contains a stylized wrench icon on the left. To its right is the text "Customer Care Line (after sales service)". Below this is the phone number "086 100 3339". In the bottom right corner is the DEFY logo and the slogan "Believe in better".

**PB 7680 SS**

**INSTRUCTION MANUAL**  
**POWER BLENDER**

# Read this manual before operation of the appliance!

Dear Customer,

Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.

## The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

## Controls and parts

A: Jug

B: Chopping blade

C: Motor housing

D: Start/Stop button

E: Auto Blender

F: Pulse button

G: Non-slip feet

H: Cable reel

I: Jar Lid



The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.

If the appliance is damaged in any way do not use it. Report the damage to your dealer who will take the necessary corrective action.

# 1 Safety and set-up

---

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional-catering purposes. It should not be used for commercial use.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries follow all instructions.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull the plug from the wall socket.
- Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming
- For additional protection, this appliance should be connected to a household current fault protection circuit breaker of no more than 30 mA. Consult an electrician for advice.
- Do not immerse the motor housing, power cord, or power plug in water or any other liquids. Do not hold it under running water. Only the lid and the plastic jug can be cleaned safely with water and washing-up liquid in the dishwasher.
- Disconnect the power plug after using the appliance, before cleaning the appliance or leaving the room and if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the power cord away from hot surfaces and open flame.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by an authorised service centre to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.

## Safety and set-up

---

- This appliance cannot be used by children.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not leave the appliance unattended while it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time, clean all parts which come into contact with food carefully. Please see details in the “Cleaning and Care” section.
- Never operate or place any part of this appliance on or near hot surfaces such as a gas burner, hotplate or heated oven.
- Do not use the appliance for anything other than its intended use.
- Never use the appliance in or near to combustible or inflammable places and materials.
- Operate the appliance only with the delivered parts.
- Do not use the appliance with damp or wet hands.
- Never place the appliance, attachments, power cord or plug on hot surfaces such as gas or electric burners or hot oven surfaces and never use it with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less, before using the appliance.
- Always use the appliance on a stable, flat, clean, dry and non-slip surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.
- Do not use the appliance if the blade unit is damaged or shows signs of wear.
- Never clean the appliance with your bare hands.
- Never try to use the appliance without the lid.
- Do not attempt to remove the lid until the blades have completely stopped.
- A spatula may be used to remove the ingredients from the plastic jug. The appliance must be switched off before doing this.
- Never operate the appliance for longer than necessary for processing the food.
- Remove bones and stones from food to prevent the blade unit and the appliance from being damaged.
- This appliance is only intended for short periods of use and should only be in continuous use for maximum 1 minute. After use, let the appliance cool down sufficiently.
- Do not crush ice cubes.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

## Safety and set-up

### Children's safety

- Always keep the appliance out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....



**Warning:** Repairs must be carried out by authorised persons only. Repairs carried out by incompetent persons create a user risk.

Please register your product at

**[www.defy.co.za](http://www.defy.co.za)**

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

## 2 Operation

### Preparation


#### Caution

- Switch off the appliance and disconnect from the supply before changing accessories or handling parts that move in use.

1. Remove all packaging and sticker materials and dispose of them responsibly.
2. Take the motor housing unit **C** and place it on a level surface, e.g. on the kitchen counter.


#### Caution

- The blade unit is very sharp! Handle the blade unit with utmost care, especially during cleaning, in order to avoid injuries.
3. Clean all parts, with the exception of the motor housing **C** as described in "Cleaning and care".
  4. After cleaning, re-assemble the jug blender in the reverse order.
  5. Insert chopping blade **B** unit onto the jug **A** by rotating it clockwise. Note the "lock" arrow direction at the bottom of the chopping blade unit **B**.

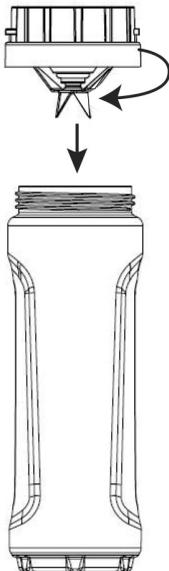

6. Place jug **A** onto the motor housing **C**  
Lock jug **A** clockwise according to the "lock" arrow on the motor housing **C**.

7. To release jug **A**, turn it in an anti-clockwise direction.

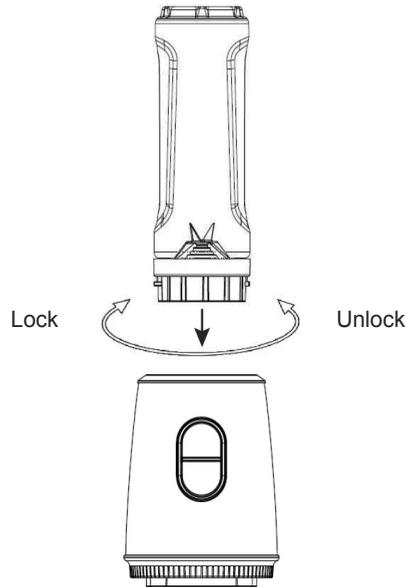

	Make sure that the notches on the bottom of the jug <b>A</b> fit those in the motor housing <b>C</b> .
---	--

Cut food into small pieces before placing in the appliance

### Blending

1. Place the device on an even and dry surface. The non-slip feet **G** ensure the stability of the appliance.
2. Make sure that the power cord is disconnected from the power supply.
3. Remove jug **A** from the motor housing **C**; to do this, turn jug **A** in an anti-clockwise direction and lift it upwards; Turn off the chopping blade **B**, turning it clockwise.
4. Now put the ingredients to be blended into jug **A**. Do not overfill.

### Note

- Add water to ensure the jug blender functions smoothly.

Mix 3 units of hard food and 2 units of water in order to have a smooth jug blender experience. (i.e.: 60 gr hard food 40 ml water)

	<b>Caution</b> Never run the blender continuously for longer than 1 minute in order to prevent overheating.
--	---

**Caution**

- Do not place or blend hot food or liquids in jug **A**. If you process soup, make sure that the liquid temperature does not exceed 40°C.
- Never let the jug blender operate while empty (without food).
- Never let the jug blender operate without jug **A** on the motor housing **C**.

5. Close jug **A** with the cutter blade **B**.

6. Place jug **A** onto the motor unit **C** in an upright position in such a way that the cutter blade **B** is facing down.

**Caution**

- Never move or turn jug **A** after it has been properly seated in the place.
7. Connect the power plug to a suitable power outlet.
  8. Press the required programme button.

**Auto Blend**

Press Auto Blend **E**. The button light will illuminate. The product will operate in auto programme for 60 seconds and then stop automatically.

Press Auto Blend again or press Start/Stop button **D** to stop the product during operation.

**Pulse Button**

Press and hold "Pulse" **F** to start blending. The button light will illuminate. Release the button when the blending process has been completed.

After running the appliance for 1 minute, allow for it to cool down before using it again. Be sure the motor is switched off and has completely stopped before removing jug **A** from the motor housing **C**.

	Never place any utensil (scraper, fork, etc.) in jug <b>A</b> while the blender is operating.
---	---

9. Pull the power plug out of the power outlet.

10. Remove jug **A** from the motor housing **C** ; to do this, turn jug **A** in an anti-clockwise direction.

11. Remove chopping blade **B** by turning it counter clockwise and attach the jar lid **I** onto jug **A**.

**Maximum quantities and processing time**

See table below for maximum and processing time.

Ingredients	Maximum quantities	Processing time
Fruits	100 - 200 g	20 - 30 Seconds
Fruit juice	100-200 g Fruit + Water (optional)	20 - 30 Seconds
Milkshake	100 g Fruit + 300 ml Milk	20 - 30 Seconds

	Pressing on the Pulse button for 1 to 2 seconds is a "PULSE". "PULSE" is an impact function. This function helps with better blending results.
--	--

### 3 Preparation & assembly

#### Tips for blending

When blending solid food, such as raw vegetables, cooked or uncooked fruits always cut them into no larger than 2-5 cm pieces before placing them into jug **A**. Blend no more than 2 cups at a time. This will speed up the blending process and reduce wear on the blending blades.

Always place liquid ingredients in jug **A** first, unless a recipe specifically states otherwise. To blend beverages, place all ingredients in jug **A** together at the same time. Avoid over blending. Usually, you will need to blend for a few seconds. Over blending may cause food to become mushy.

### 4 Information

#### Cleaning and care

	<b>WARNING:</b> Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
	<b>WARNING:</b> The blades of the cutter unit are very sharp! Handle the blades with utmost care in order to avoid injuries. Never clean the appliance with your bare hands.
	<b>DANGER!</b> Always disconnect the plug from the wall socket before any maintenance or cleaning.

Clean the jug blender after each use. Do not let any food remnants harden on and inside the jug blender. This will make it more difficult to clean later.

Do not use boiling water. The blade assembly bearings have been designed with a lifetime lubricant; exposure to boiling water may damage these bearings and shorten the life of the blender.

Switch the appliance off and disconnect it from the wall socket. Allow the appliance to cool down.

Remove jug **A** from the motor housing **C**. Rinse with water to remove any large food particles that may have accumulated in jug **A**. Refit jug **A** on the motor housing **C**. Place 1 to 1 ½ cups warm water with some drops of mild cleanser into jug **A** and switch to speed “**II**” for a few seconds. Remove jug **A** from the motor housing **C** and rinse with water. Repeat as necessary.

	Never immerse the motorized base or blade unit in liquid, or place in a dishwasher. Only the lid <b>I</b> and jug <b>A</b> may be immersed and placed in a dishwasher.
---	--

Use a damp soft cloth and some mild cleanser to clean the exterior of the appliance. Wipe the motor housing **C**, Chopping blade **B** and lid **I** with a lint free cloth before the next usage.

	Before using or storing the appliance after cleaning, dry all parts carefully using a soft towel.
---	---

#### Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of reach of children.

#### Environmental note

This appliance has been made from high quality materials and parts which can be reused and are suitable for recycling. Do not dispose of the appliance with normal household waste at the end of its service life. Consult your local authorities for disposal information and facilities available.

#### Help protect the environment by recycling used appliances.

#### Technical data

**Power supply:** 220-240V~, 50-60 Hz

**Power:** 1000 W

**5****Branches**

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

---

**South African Branches:****BLOEMFONTEIN**

160 Long Street, Hilton, Bloemfontein 9301  
Tel: 051 400 3900

[Bloemfontein.Service@defy.co.za](mailto:Bloemfontein.Service@defy.co.za)

**CAPE TOWN**

5A Marconi Rd. Montague Gardens, 7441  
Tel: 021 526 3000

[CapeTown.Service@defy.co.za](mailto:CapeTown.Service@defy.co.za)

**DURBAN**

135 Teakwood Road, Jacobs,  
Durban, 4052  
Tel: 086 100 3339

[Durban.Service@defy.co.za](mailto:Durban.Service@defy.co.za)

**EAST LONDON**

Robbie de Lange Road, Wilsonia,  
East London, 5201

Tel: 086 100 3339

[EastLondon.Service@defy.co.za](mailto:EastLondon.Service@defy.co.za)

**JOHANNESBURG**

Cnr. Mimetes & Kruger Sts. Denver ext.12  
Johannesburg, 2094

Tel: 011 621 0200 or 011 621 0300

[Gauteng.Service@defy.co.za](mailto:Gauteng.Service@defy.co.za)

**POLOKWANE**

87 Nelson Mandela Drive, Superbia 0699  
Tel: 0152 92 1166 / 7 / 8 / 9

[Polokwane.Service@defy.co.za](mailto:Polokwane.Service@defy.co.za)

**PORT ELIZABETH**

112 Patterson Road, North End, Port Elizabeth  
6001

Tel: 041 401 6400

[PortElizabeth.Service@defy.co.za](mailto:PortElizabeth.Service@defy.co.za)

**PRETORIA**

Block A1 Old Mutual Industrial Park,  
Cnr. D.F.Malan Drive & Moot Str. Hermanstad,  
0082

Tel: 012 377 8300

[Pretoria.Service@defy.co.za](mailto:Pretoria.Service@defy.co.za)

**Sub-Saharan Africa Branches:****ZAMBIA: SOUTHGATE INVESTMENTS LTD**

Plot 1606, Sheki Sheki Road  
P.O. Box 33681

Lusaka, 10101, Zambia

Tel: +260 0211 242332/3

Fax: +260 0211 242933

[sgiservicecentre@microlink.zm](mailto:sgiservicecentre@microlink.zm)

**NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD**

10 Tienie Louw Street, Northern Industrial Area  
P.O. Box 21158, Windhoek, Namibia

Tel: (061) 216162

Fax: (061) 216134

[atlantic@mweb.com.na](mailto:atlantic@mweb.com.na)

**ZIMBABWE: TRADECOMAFRICA**

Trade Com Africa, 183 Loreley Crescent  
Msasa, Harare, Zimbabwe

Tel: +263 4 486165/6

Cell: +263 772 469010

Cell: +263 772 469011

**BOTSWANA: RAY MORGAN AGENCIES**

RMA Service Centre, Plot 48, East Gate  
Gaborone International Commerce Park  
Kgale View, Gaborone  
Botswana

Tel: +267 390 3996 / 390 3912

Fax: +267 318 7376

Cell: +267 7134 6539

[service@rma.co.bw](mailto:service@rma.co.bw); [raja@rma.co.bw](mailto:raja@rma.co.bw)

**SWAZILAND: LYNDS DISTRIBUTORS**

P.O Box 716, Mbabane, Swaziland, H100

Tel: (00268) 2515 4310/8

Fax: (00268) 2518 4318

**MOZAMBIQUE: COOL WORLD. LDA**

Rua da Resistencia No. 97B R/C

Cell: +258 84 44 61 234

[coolworldlda@hotmail.com](mailto:coolworldlda@hotmail.com)

Nosso Show Room

Av: da Industrias, Parcela No.735 \* 735A

Machava, Maputo

---

**OTHER AREAS ARE SERVICED BY OVER 200 AUTHORISED SERVICE AGENTS.  
PLEASE CONSULT THE CUSTOMER CARE LINE ON 086 100 3339 FOR DETAILS.**

## 6 Warranty

---

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of ONE YEAR from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Carry-in service. Small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact your nearest Defy office. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF  
PURCHASE FOR WARRANTY PURPOSES.**