

**HBS 7750 X
STICK BLENDER**



Believe in better



Customer Care Line
(after sales service)

086 100 3339

Small appliance
Instruction manual

Read this manual before operation of the appliance!

Dear Customer,

Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.

The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

Controls and parts



1. Blending shaft
2. Speed adjustment button
3. Operating switch
4. Motor unit
5. Measuring jug
6. Non-slip rubber base (cover)

1 Safety and set-up

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use! Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

Intended use

- This appliance is intended only for household use; it is not suitable for professional use. It is designed for chopping and whisking small amounts of solid food only.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries.
- Never clean the appliance with bare hands.
- Do not touch any moving parts of the appliance. Do not attach or remove the parts until the appliance comes to a complete stop.
- Always keep hair, clothing and any other utensils away from the appliance during operation in order to prevent injury and damages.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not wrap the power cord around the appliance.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Always remove the power plug from the wall socket before assembling the appliance, after using the appliance, before disassembling, before cleaning the appliance, before leaving the room or if a fault occurs.
- Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Do not use an extension cord with the appliance.
- To prevent overheating, do not use the appliance continuously for more than 10 seconds. Leave to cool for 1 minute in between each 10 seconds of operation.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Do not let cord hang over edge of table or hot surface.
- Do not immerse upper part of blender into water as this would give rise to electric shock.
- Use the appliance only with the supplied parts.
- Wait for moving accessories to stop and unplug the appliance when left unattended, while installing/ removing accessories or before cleaning.

Safety and set-up

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- Do not use if the power cable, the appliance or blades are damaged or show signs of wear. Contact the customer care line.
- Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the first time, carefully clean parts which come into contact with food. See details in the “Cleaning and Care” section.
- After cleaning dry the appliance and all parts before connecting it to the mains supply and before attaching the accessories.
- Do not operate the appliance without ingredients in the measuring jug.
- Keep the appliance and attachments, power cord or plug away from hot surfaces, flames, gas or electric burners or hot oven surfaces and never use with hot liquids or food.
- Avoid contact with moving parts.
- Do not use the appliance for anything other than its intended use.
- Never use the appliance with damp or wet hands.
- Only use the original parts or parts recommended by the manufacturer
- The appliance is designed to process only common household quantities.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
- A spatula may be used to remove the food from the measuring jug. Never use bare hands to remove food. Make sure that the appliance is switched off before doing this.
- Do not operate the appliance with dry or hard foods or for ice crushing as this may result in dull blades.
- Remove hard substances from food to prevent the blades and the appliance from being damaged.
- Remove bones and stones from food to prevent the blades and the appliance from getting damaged.
- The use of accessories not recommended by the manufacturer may cause injuries to persons.
- Do not use outdoors.
- Follow all warnings to prevent injuries due to incorrect use.
- Save these instructions.

	<p>Never switch on the appliance for longer than necessary when processing food.</p>
	<p>Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains and bones. Remove stalks from herbs, shells from nuts, bones, tendons and gristle from meat.</p>
	<p>Prepare food in small amounts. (max. 200 g).</p>
	<p>WARNING: The chopping blade is very sharp, be careful while inserting the chopping blade. Do not touch the chopping blade with bare hands.</p>
	<p>Keep packaging materials out reach of children.</p>
	<p>WARNING: Do not touch the chopping blade with your bare hands. The chopping blade is very sharp.</p>
	<p>The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.</p>

2 Operation

Initial use

Clean the appliance parts before initial use. Use the appliance upright on a balanced, flat, clean, dry and non-skid surface.

Do not use the appliance continuously for more than 10 seconds. Turn off the device when used for more than 10 seconds and wait for 1 min. before operating again.



WARNING: Do not run the appliance continuously for more than 10 seconds at a time in order to prevent overheating. After running the appliance for 10 seconds, allow for it to cool down for 1 minute before using it again.

Blending and chopping with the blending shaft

1. Insert blending shaft (1), by aligning (▼) symbol on motor unit (4) with (⌚) symbol and turning clockwise. Make sure (▼) symbol is aligned with (⌚) symbol. Fit it into its place, do not apply too much force.
2. Put processed ingredients (in small pieces) in measuring container or a container that you will use.
3. Immerse blending shaft (1) into the container.
4. Plug in the appliance.
5. Run the appliance by pressing operation button (3).



Turn speed adjustment button (2) to gradually increase speed.

Start mixing in low speed while mixing ingredients. Ingredients may be spattered when you start with high speed.

You can get better results if you make circular movements with the appliance during processing.

6. Release the operation switch when the operation is finished. Unplug the appliance and wait for it to stop completely.

7. Turn blending shaft (1) counterclockwise and remove from motor unit (4) when it is aligned with (⌚) symbol.



WARNING:

Never touch the blades with your bare hands.



Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.

Cut the food in small pieces.

Maximum quantities and processing time

Refer to the table for processing time and maximum quantities.

Attachment	Ingredients	Operation time
Blender leg	150g carrot (cut-into 1.5cm cubes) and 300ml water	10 seconds



Do not use the appliance continuously for more than 10 seconds.

To achieve the best results press the operation button (1) intermittently.

3 Information

Cleaning and care

	WARNING: Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
	WARNING: Do not touch the chopping blades with bare hands. The blades are very sharp. Use a brush!
	WARNING: Never put the base unit or power cord in water or any other liquids and never hold them under running water.

1. Unplug the appliance before cleaning.
2. Make sure the appliance is at complete stop and remove blending shaft.
3. Wipe appliance motor unit (4) with a damp cloth.
4. Chopper blade can be washed using a sponge and dish-washing detergent.
5. Dry all parts of the appliance after cleaning.

	WARNING: Do not wash the blending shaft in dishwasher.
	Before using or storing the appliance after cleaning, dry all parts carefully using a soft towel.
	DANGER! Always disconnect the plug from the wall socket before any maintenance or cleaning.

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....

Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.

Environmental note

This appliance has been made from high quality materials and parts which can be reused and are suitable for recycling.

Do not dispose of the appliance with normal household waste at the end of its service life. Consult your local authorities for disposal information and facilities available.

Help protect the environment by recycling used appliances.

Technical data

Power supply: 220-240V~, 50/60 Hz

Power: 750 W

Technical and design modifications reserved.

Please register your product at

www.defy.co.za

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

4**Branches**

If you have followed the instructions and still have a problem, contact the customer care line on 086 100 3339. They will be able to advise you on any aspect of the appliance.

South African Branches:**BLOEMFONTEIN**

Unit Number 5
Monument Business Park
50 Monument Road
Oranjesig, Bloemfontein
Bloemfontein.Service@defy.co.za

CAPE TOWN

5A Marconi Rd. Montague Gardens, 7441
CapeTown.Service@defy.co.za

DURBAN

135 Teakwood Road, Jacobs,
Durban, 4052
Durban.Service@defy.co.za

EAST LONDON

Robbie de Lange Road, Wilsonia,
East London, 5201
EastLondon.Service@defy.co.za

GAUTENG, MIDRAND

127 15th Road, Cnr Pharmaceutical & 15th Rd,
Midrand, Gauteng
Gauteng.Service@defy.co.za

POLOKWANE

87 Nelson Mandela Drive, Superbia 0699
Polokwane.Service@defy.co.za

PORT ELIZABETH

112 Patterson Road, North End, Port Elizabeth
6001
PortElizabeth.Service@defy.co.za

Sub-Saharan Africa Branches:**ZAMBIA: SOUTHGATE INVESTMENTS LTD**

Plot 1606, Sheki Sheki Road
P.O. Box 33681
Lusaka, 10101, Zambia
Tel: +260 0211 242332/3
Fax: +260 0211 242933
sgiservicecentre@microlink.zm

NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD

10 Tienie Louw Street, Northern Industrial Area
P.O. Box 21158, Windhoek, Namibia
Tel: (061) 216162
Fax: (061) 216134
atlantic@mweb.com.na

ZIMBABWE: TRADECOMAFRICA

Trade Com Africa, 183 Loreley Crescent
Msasa, Harare, Zimbabwe
Tel: +263 4 486165/6
Cell: +263 772 469010
Cell: +263 772 469011

BOTSWANA: RAY MORGAN AGENCIES

RMA Service Centre, Plot 48, East Gate
Gaborone International Commerce Park
Kgale View, Gaborone
Botswana
Tel: +267 390 3996 / 390 3912
Fax: +267 318 7376
Cell: +267 7134 6539
service@rma.co.bw; raja@rma.co.bw

SWAZILAND: LYNDS DISTRIBUTORS

P.O Box 716, Mbabane, Swaziland, H100
Tel: (00268) 2515 4310/8
Fax: (00268) 2518 4318

MOZAMBIQUE: COOL WORLD. LDA

Rua da Resistencia No. 97B R/C
Cell: +258 84 44 61 234
coolworldlda@hotmail.com
Nosso Show Room
Av: da Industrias, Parcela No.735 * 735A
Machava, Maputo

5 Warranty

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of TWO YEARS from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Carry-in service. Small appliances are repaired in our service centres and are not collected from the customers home. Faulty units must be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance. The Company shall not be responsible for damages caused by insect and/or animal infestation.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact your nearest Defy office. Please refer to the previous page for respective South African branches and Sub-Saharan Africa branches.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF
PURCHASE FOR WARRANTY PURPOSES.**